

MeterBuilder™ MB-1 PROGRAMMABLE RF POWER METER

CIRCUIT DESCRIPTION

Version 1.01

June 2011



Patent and Copyright Notices

Patent Applied For

Copyright

Material in this document copyrighted © 2011 FullWave, LLC.

All firmware and software used in the MB-1 copyrighted © 2011 FullWave, LLC.

1	CIRCUIT DESCRIPTION	3
1.1	DISPLAY/SWITCH BOARD.....	3
1.2	CONTROLLER BOARD.....	4
2	SCHEMATICS.....	9

FIGURES

Figure 1 – 7 Segment LED - Pin Out.....	3
Figure 2 - Schematic - Display Board - 1 of 2.....	10
Figure 3 - Schematic - Display Board - 2 of 2.....	11
Figure 4 – Schematic - Controller Board – Power – 1 of 2	12
Figure 5 - Schematic - Controller Board – Power – 2 of 2.....	13
Figure 6 - Schematic - Controller Board – Coupler Processing Circuitry	14
Figure 7 - Schematic - Controller Board – Panel Meter and Alarm Relay Circuitry	15
Figure 8 - Schematic - Controller Board – Processor Module.....	16
Figure 9 - Schematic - Controller Board – I/O	17
Figure 10 - Schematic - Controller Board – Miscellaneous	18

TABLES

Table 1 – Connections Between Display Board and Controller Board	4
--	---


1 Circuit Description

1.1 Display/Switch Board

7-Segment LEDS: The internal 7-Segment LEDs are driven from Maxim 7219/7221 ICs. These chips provide a serial interface that is driven by the PIC processor thereby reducing the number of interconnect leads between the Display Board and the Controller Board. Each 7219/7221 device drives eight 7-segment LEDs. This chip also controls the brightness of the 7-Segment LEDS. The MB-1 software allows you to adjust the brightness of the 7-Segment LEDS to one of nine different levels.

The 7-Segment LEDS are plugged in to 40 pin sockets making it easy to swap the LEDs for a different color. Any .52 inch common cathode 7-Segment LED that has the electrical footprint below and the pin-out footprint compatible with the 40 pin socket spacing can be used as long as the current requirement is 20 mA or less per segment. If you obtain your own 7-Segment devices, cut the leads to a length of 3.8 mm if they are longer so that they will fit properly into the 40 pin sockets.

Figure 1 – 7 Segment LED - Pin Out

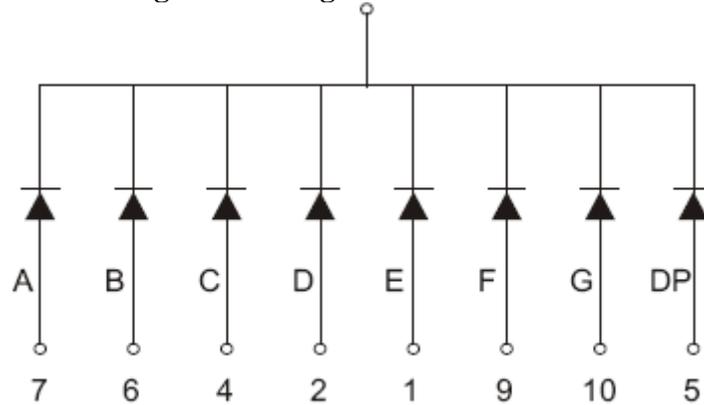

Front Panel switches: With the exception of the Power switch and the four menu switches SWMENU1 - SWMENU4, each of the normally opened contacts of the front panel switches, when pushed, applies a ground to an input of the I/O expander chip (MCP23S17) on the Controller Board. The I/O expander chip, in turn, generates a signal that is read by the processor, which then determines the switch that was pushed and the duration of the push. The software then takes the appropriate action (such as bringing up a menu on the LCD).

The On/Off Power switch simply applies a closure to the flip flop (HCF-4069 IC) on the Controller Board to toggle the on/off state of the power relay.

Menu Switches SWMENU1 – SWMENU4 are wired directly to the four external interrupt pins of the PIC processor board. When any of these four menu buttons is pressed, an interrupt is generated and is immediately processed by the software. This allows most menu selections to be made without disrupting normal meter operation. Both the Processor interrupt leads and External I/O chip inputs have internal pull up resistors in the PIC, which eliminates the need for external pull up resistors.

Each front panel switch contains one or two LEDs that provide status information to the user (for example, the on/off state of the Panel Meter’s AutoRange feature, or the presence of an alarm trip condition). All of the switch LEDs, with the exception of the LED on the Power switch, are driven from output ports from the PIC processor board. The LED on the Power switch is illuminated directly from the 5 volt bus through a resistor when the Power Relay is operated.

Interconnection to Controller Board: Three ribbon cable assemblies connect signals between the Display Board and the Main Controller Board. These cables route the following signals:

Table 1 – Connections Between Display Board and Controller Board

<i>Connector</i>	<i>Signals</i>
JPWR	5 volts from Controller Board to Display Board and Signals to Drive the LEDs on some of the Front Panel Switches
JLED	Signals to Drive the LEDs on some of the Front Panel Switches and Switch Closure to 4069 Flip Flop Ckt when Power button is pressed
JSW	Signals from the Front Panel Switch Contacts to the I/O Expander chip, and to the 4 interrupt leads on the Processor Board

1.2 Controller Board

Power: 12 volt DC power is constantly applied from the Power Adaptor to the 4069 IC and the common terminal of Power Relay RLY1 regardless of the relay’s state. The meter is protected with a quick blow 1.6 amp fuse.

Each press of the power switch on the Display Board toggles the state of the 4069 flip flop. When the flip flop is toggled on, this turns on transistor **Q1**, which in turn, operates the Power Relay **RLY1**.

The 1000 pf capacitor, which is connected to the 4069 flip flop, is used to force the state of the flip flop to a predictable (off) condition after a power interruption if the meter was powered off at the time of the interruption. If the meter is powered on, and a short duration power interruption occurs (a few seconds), the meter will turn back on with the “Startup Set” settings when power is restored.

Power relay RLY1 switches the DC 12 volt nominal input voltage to the two **7805** 5-volt regulators. Power is applied through four power diodes (**1N540x**). These diodes are used as voltage drop diodes to reduce the heat dissipation of the 7805 regulators. They also provide polarity protection on the 12 volt input. Because of the current demands of the external display devices, two regulators are used with each regulator feeding its own power bus.

The **+5V** bus is used for all of the internal MB-1 circuitry including the PIC processor, the LCD, and the internal 7-Segment LEDs. The **+5V-AUX** bus is used primarily for powering the external 7-segment and external Bar Graph display devices that are provided with the Expansion Kit. The **+5V-AUX** bus also powers the alarm relay and sound transducer, and is also connected to the +5v RCA jacks on the rear panel that are provided for prototyping.

MB-1 can drive larger external 7-segment displays (up to 7 inches high). The 7-segment displays larger than 1.5 inches are powered from 12 volts instead of 5 volts. Two headers on the main control board (**EXT-7SEG1** and **EXT-7SEG2**) and associated jumper pins are used to select the correct voltages for the external display devices (5 volts or 12 volts) based on the types of external display devices connected to the two Hi-Visibility output connectors on the rear panel of the meter.

Combinations of 5 volt and 12 volt external 7-segment display devices can be used at the same time as long as the jumper settings are set properly. The User’s Manual provides complete details on selecting the proper voltages for the various types of external display devices. The larger 7-segment displays (greater than 1.5 inches high) are supported only if the Expansion kit and Large 7-Segment Display option are installed in MB-1.

Note that for reference purposes, the SURE Electronics pin numbering scheme for the 10 pin IDC connectors (on connectors JHV1 and JHV2) are given in parentheses on both the schematic and silkscreen on the PCB. This numbering is different than the standard numbering used for these IDC connectors in the MB-1 documentation. The parenthetical entries will be useful if you need to cross reference the MB-1 documentation with the SURE Electronics documentation for any reason.

RF chokes **L2** and **L3** and associated bypass capacitors provide additional filtering of the +5V bus. **L1** provides filtering for the 12 volt powers that feeds the 4069 flip flop.

Coupler Input Circuitry: Up to four couplers, each with a FWD and REFL signal, may be connected to the RCA Coupler Port jacks. MB-1 also supports applications other than RF

Power measurement. Such applications, referred to as “Generic Meter Applications” in the MB-1 documentation, allow MB-1 to be interfaced to a wide range of analog sensors. These applications make use of only the FWD port on the associated coupler input.

The signal from each coupler input port is fed through an RC low pass filter to remove excess RF or other high frequency noise signals. The signal is then fed into a 15 turn trim pot, which controls the input level fed into the **MCP6S28** multiplexer/amplifier. The MCP6S28 serves both as a Programmable Amplifier with a maximum gain of 32 and as a multiplexer. After one of the eight input signals is selected by the multiplexer function, one of six gain settings is applied, and the amplified signal is routed to the output pin of the MCP6S28. The output signal is connected to the 10 bit internal A-to-D converter of the PIC Processor on signal **COUP-BUS-FILT** after it is further filtered with a two pole low pass RC filter. The gain factor of the MCP6S28 of 32, together with the 10 bit A-to-D resolution of the PIC processor, provides an effective low range resolution of 15 bits.

The software controls the gain of the **MCP6S28** multiplexer/amplifier device based on the instantaneous value of the voltage being processed on the coupler FWD and REFL coupler port leads. The gain is adjusted to maximize the signal that is applied to PIC processor’s A-to-D input without overdriving it. This provides maximum achievable resolution under all signal conditions.

Panel Meter Drive Circuitry: The internal analog crossneedle Panel Meter and any user provided external analog meters are driven from dual port 12 bit D-to-A converters (**MCP4922 IC**). External Panel Meters are supported only if the Expansion Kit option is installed.

Using the menu system, each Panel Meter is first calibrated by the user, with the calibration values being stored in EEPROM. Two resistors are connected in series between each D-to-A output and its corresponding Panel Meter output connection, which terminates on a rear panel RCA jack. A 100k ohm potentiometer is used for full scale adjustment of the meter movement, and a 2.7k ohm resistor is used for meter movement protection by limiting the maximum meter movement current to less than 2 mA regardless of the setting of the panel meter trim pot.

By setting the Panel Meter trim pot for minimum full scale overshoot during calibration, the maximum obtainable resolution will be achieved during operation. This will provide excellent resolution with any analog meter. (If you decide to use the “Soft Overrange” feature to drive the meter somewhat beyond full scale, this will have a negligible impact on resolution.)

Alarm Relay: The Alarm Relay **RLY2** is tripped when the **ALARM** feature is enabled and user defined thresholds are exceeded. In addition to the normal RF power meter trip functions such as SWR, low power trip, and high power trip, the alarm functions can also be used for RF ammeter and Generic Meter Applications when MB-1 is used with user-provided analog sensors.

When the software determines that a trip condition has occurred, it applies a logic 1 signal to lead **RLY-ON**, which turns on transistor **Q2**, thereby operating relay RLY2. This relay has two sets of NO-NC contacts, which are located on the Panel Meter RCA jacks on the rear of the meter.

Piezo Sounder: The sounder can be used to provide an audible alert when an alarm trip condition occurs. The sounder can also be configured to provide an enunciator for the push durations of the front panel switches (short, medium and long presses). The piezo device is controlled from logic signal **SOUND** from the PIC processor board, which turns on transistor **Q3**, thereby activating the sounder. You can reduce the volume of the sounder by increasing the value of 47 ohm resistor that is in series with the sounder.

Processor (Daughter Board): The main processor functions are provided by the ET PIC Stamp daughter board, which contains a high performance **PIC18F8722** PIC processor with 128 KB on on-board program memory. This processor also contains 3 KB of RAM, and 1 KB of EEPROM. Because of the sizeable EEPROM requirements for the MB-1 calibration tables and other configuration settings, one of two external serial EEPROM memory devices, a **25AA128**, or **25AA256** is provided depending upon whether the Expansion Kit is installed. IC **25AA128** provides an additional 16 KB of EEPROM memory. IC **25AA256** provides an additional 32 KB of EEPROM memory. The pre-programmed **25AA256** that comes with the Expansion Kit must be installed to support the External Display modules and external analog Panel Meters.

A high precision 4.096 volt voltage reference is generated by an **MCP1541**, which is connected to voltage reference input **VREF** on the processor board.

The **MCP23S16** 16 Bit I/O Expander chip is connected to the processor board through the SPI serial interface signals **SPI-CLK-B**, **SPI-OUT-B**, and **SPI-IN**. Nine of the 16 ports on the I/O Expander are used to detect the state of nine of the front panel switches. When any of these switches is pushed, the generated signal is processed by the I/O Expander chip, which asserts a logic 0 to the processor board on lead **IO-EXT-INT**. The software then interrogates the I/O Expander chip to determine the front panel switch that was pressed and the duration of the press. (Most front panel switches have multiple functions depending upon the duration that a switch was pressed.)

MB-1 provides a “push duration” indicator that allows a user to easily determine when the short, medium, and long push durations of a multi-purpose switch have been reached. The push duration indicator can be programmed to either flash an LED or to emit a beep at the transition of each duration. The green LED on front panel switch **SW-MENU-DOWN** (top left-most switch) is used for this indicator when an LED indication is selected.

The 80 character LCD is also driven from the processor SPI serial port interface. The critical serial port signals **SPI-OUT** and **SPI-CLK** are buffered through 74HCT08 buffers to reduce the coupling of noise on to the processor pins.

The J45 connector on the processor board is used for factory programming only and is not used for field operation. The white push button switch on the PIC processor board must be in the **UP** position for normal operation and the white jumper pins on the PIC processor board must be connected as shown in the Assembly Manual.

The processor board also contains a **MAX232** Driver/Receiver, which converts the CMOS levels from the PIC processor to signals that are compatible with driving the RS-232 interface of a PC serial port. The RS-232 interface is used to communicate with a PC when loading new firmware into MB-1, when backing up or restoring MB-1's EEPROM data, or when updating the preloaded OEM coupler tables in EEPROM with new updates issued by MeterBuilder.

The RS-232 transmit and receive signals are routed from the processor board to the DB9 connector on leads **XMT** and **RCV** via the two jumper leads that connect between the PIC Processor board and two spare connections on one of the 40 pin headers.

Note that the PIC18F8722 has a "Write to Program Memory" instruction that is used by the bootloader when loading new firmware. Therefore, no special programmer or special voltage connections are required to update the MB-1 firmware

Front Panel High Precision Potentiometer: - The front panel pot is a 10 turn pot connected across the 5 volt bus (+5V). The center wiper is connected to lead **CALIB-POT**, which is connected to a voltage divider. The tap of this voltage divider feeds one of the processor's A-to-D inputs on lead **CALIB-POT-FILT**. The voltage divider drops the maximum voltage from the potentiometer's center wiper to a voltage slightly higher than the 4.096 volt reference used by the PIC's A-to-D converter. This prevents a dead spot at the top 20% travel of the high precision pot that would have otherwise resulted.

This high precision pot is used for a number of functions, including Panel Meter Calibration and "Trim" calibration of the coupler settings. When used for these types of operations, the front panel pot is used solely during the calibration functions to aid the software in determining calibration constants that are stored in EEPROM.

The front panel pot is also used to quickly dial in settings when adjusting meter functions such as the Peak Hold Time. For example, the Peak Hold Time can be easily adjusted from .1 seconds to 9.9 seconds in .1 second increments by dialing in the desired value with the front panel pot. The high resolution of the 10 turn pot makes it easy to quickly dial in one of these 98 values, which is then saved in EEPROM for later recall. This approach is also used for several option selections used in the menu and setup screens.

Coupler Trim Pots: Because MB-1 supports a wide variety of coupler types and also supports interfacing to user-provided analog sensors, each coupler input port will have its own "full scale" level. The coupler trim pots are used to scale the signal level reaching the inputs of the MCP6S28 Amplifier/Multiplexer so that maximum resolution can be obtained without overdriving the input circuitry.

Calibration of the MB-1 Coupler using the Trim Pots: All that is required for final calibration of the included MB-HF1 Coupler is a DC voltmeter and 50 ohm resistive dummy load. The MB-1 coupler that is supplied with the MB-1 meter has been benchmarked at the factory and the coupler calibration table has also been preloaded at the factory.

To adjust the coupler trim pot, power is applied from a transmitter through the MB-HF1 coupler into a dummy load. The transmit power is then adjusted until the DC voltage at the output of the coupler FWD port matches the ***DC voltage*** benchmark value printed on the coupler label. (An RCA Y connector will facilitate this measurement by allowing the voltage to be measured simultaneously by a multimeter). The coupler trim pot is then simply adjusted until MB-1 FWD power reading matches the corresponding ***power level*** printed on the coupler's benchmark label. A similar process can be used to adjust the trim pot for the REFL coupler port.

2 Schematics

The schematics below have adequate resolution so they can be expanded for easier viewing.

Figure 2 - Schematic - Display Board - 1 of 2

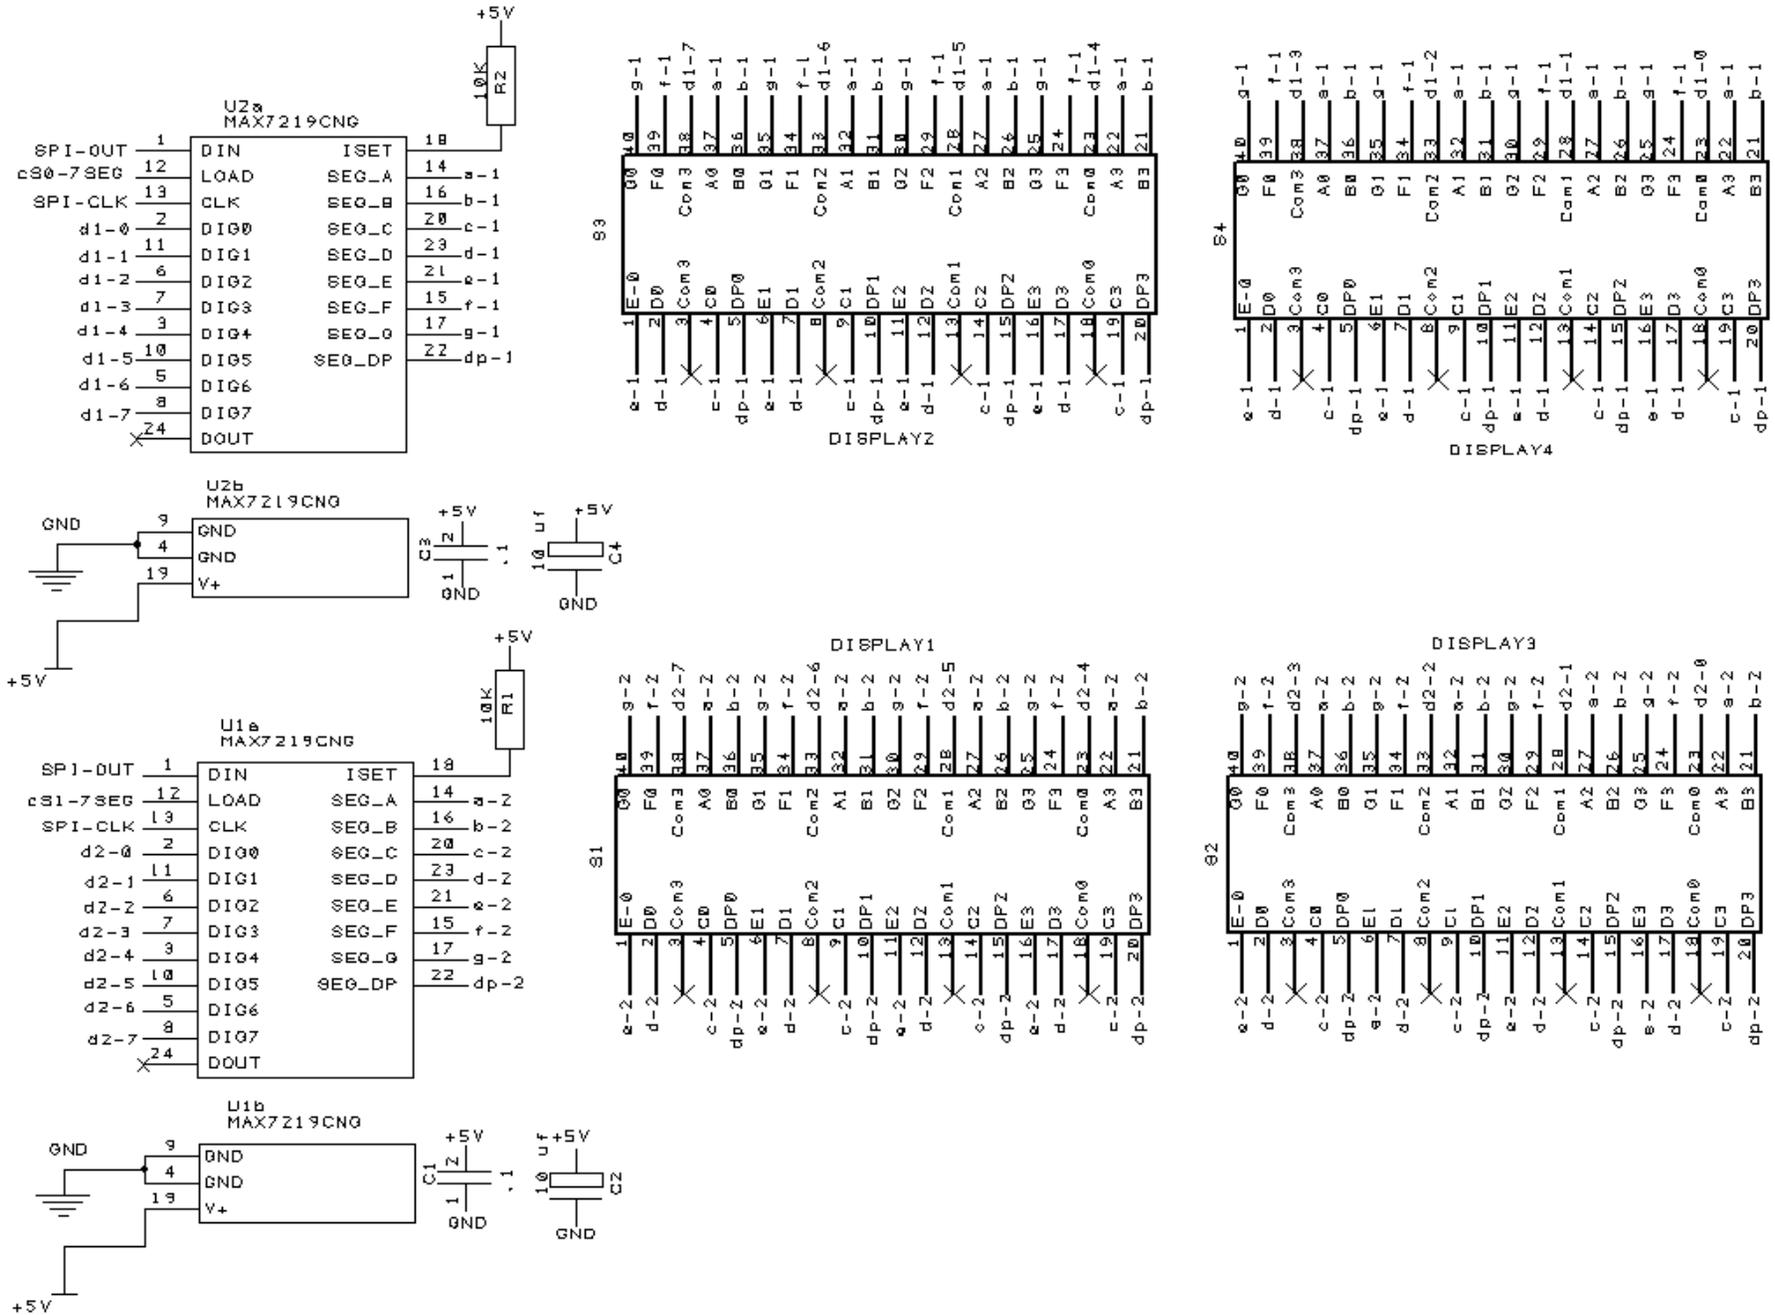


Figure 3 - Schematic - Display Board - 2 of 2

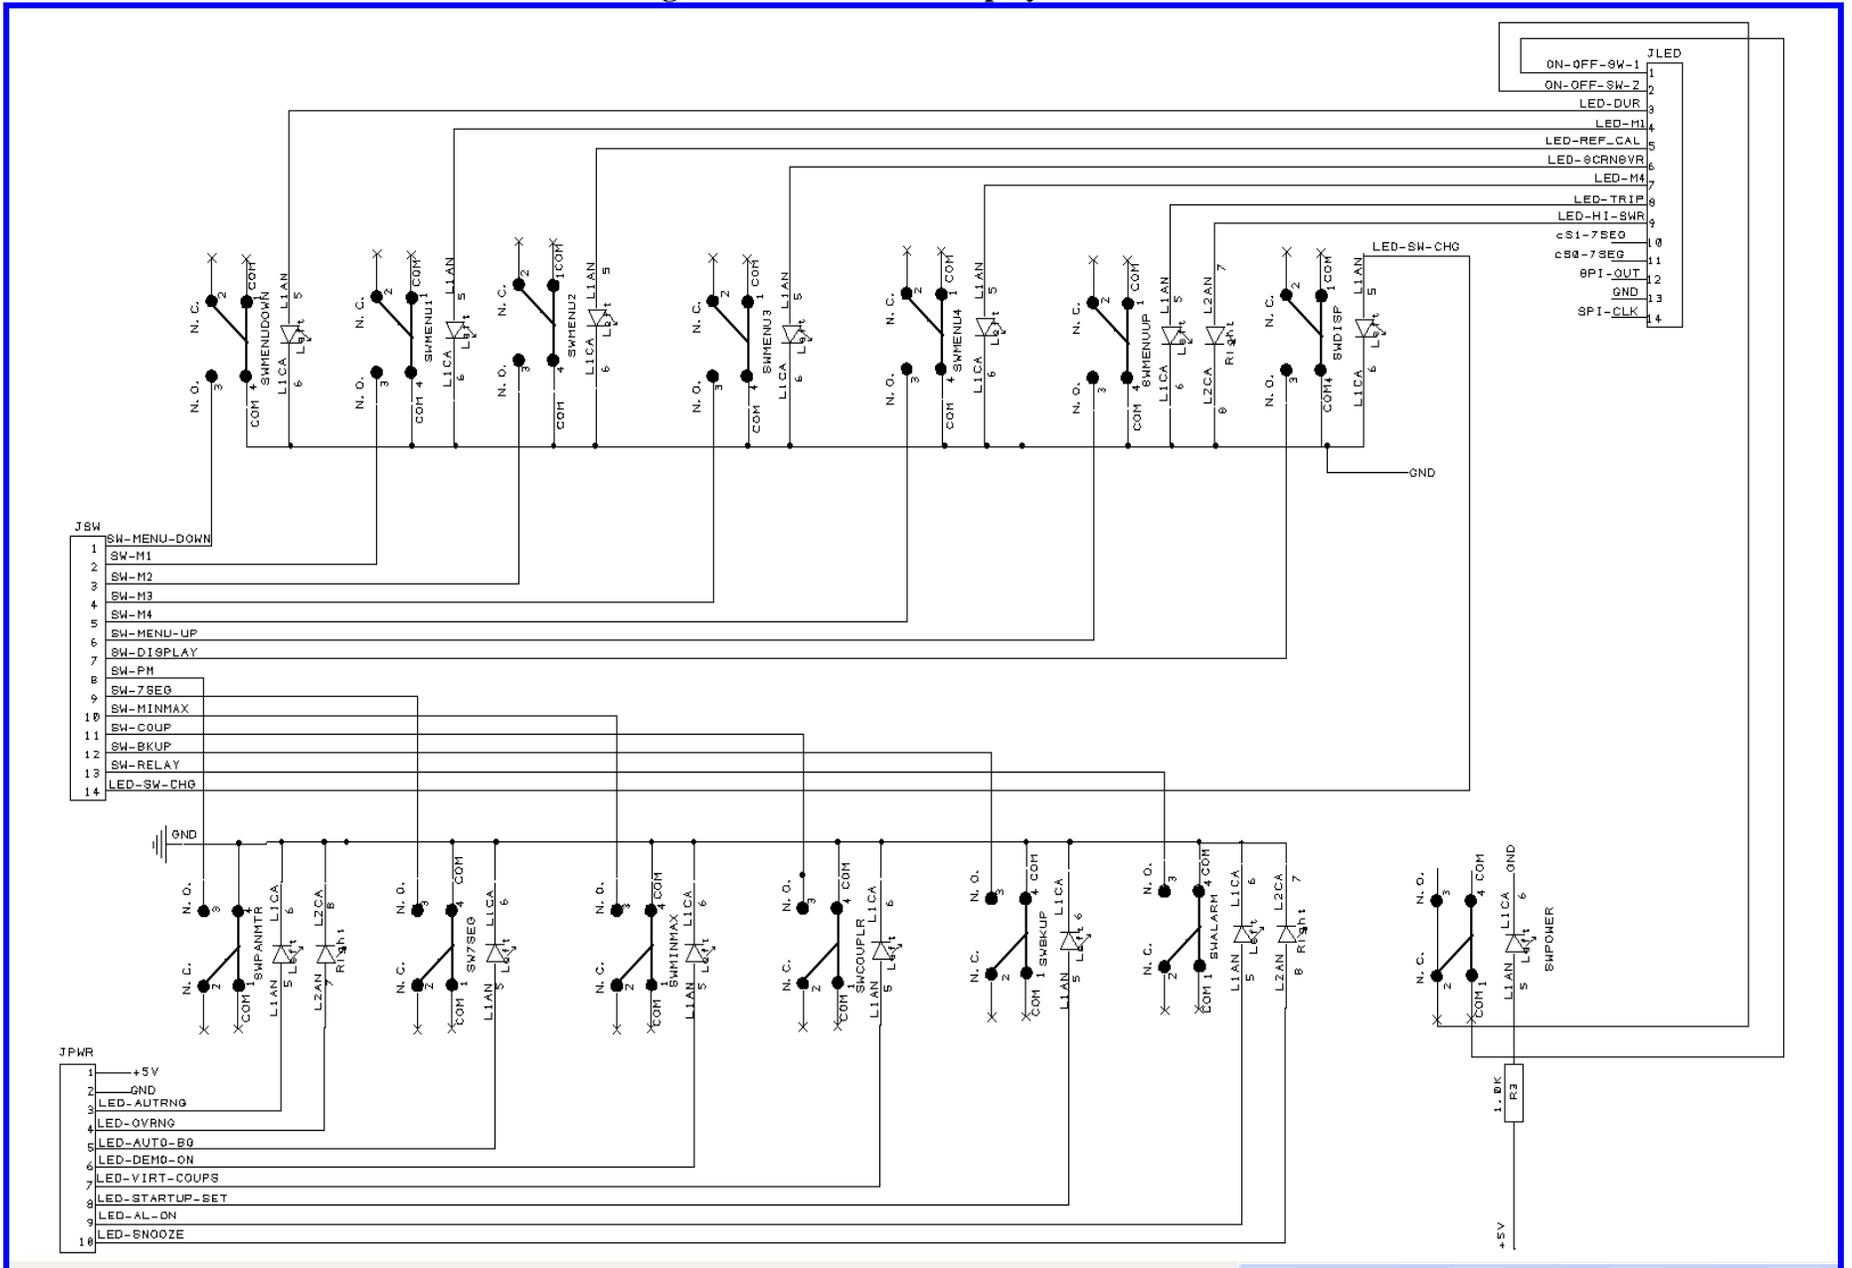


Figure 4 – Schematic - Controller Board – Power – 1 of 2

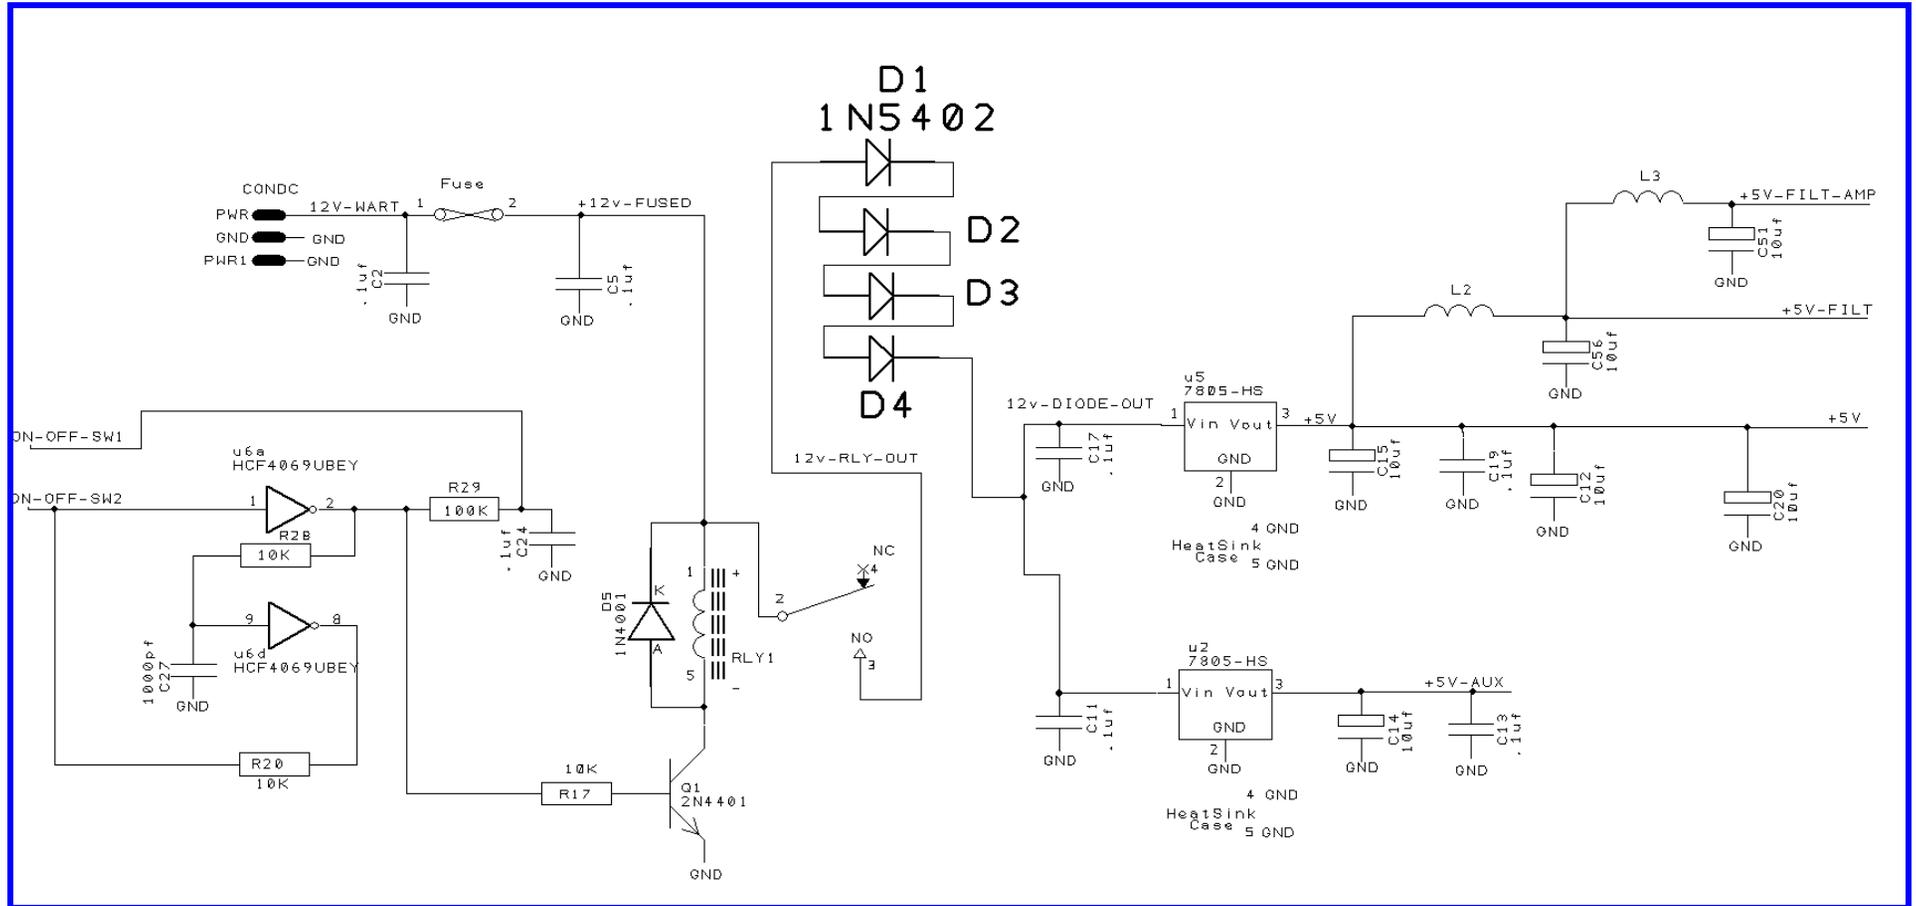


Figure 5 - Schematic - Controller Board – Power – 2 of 2

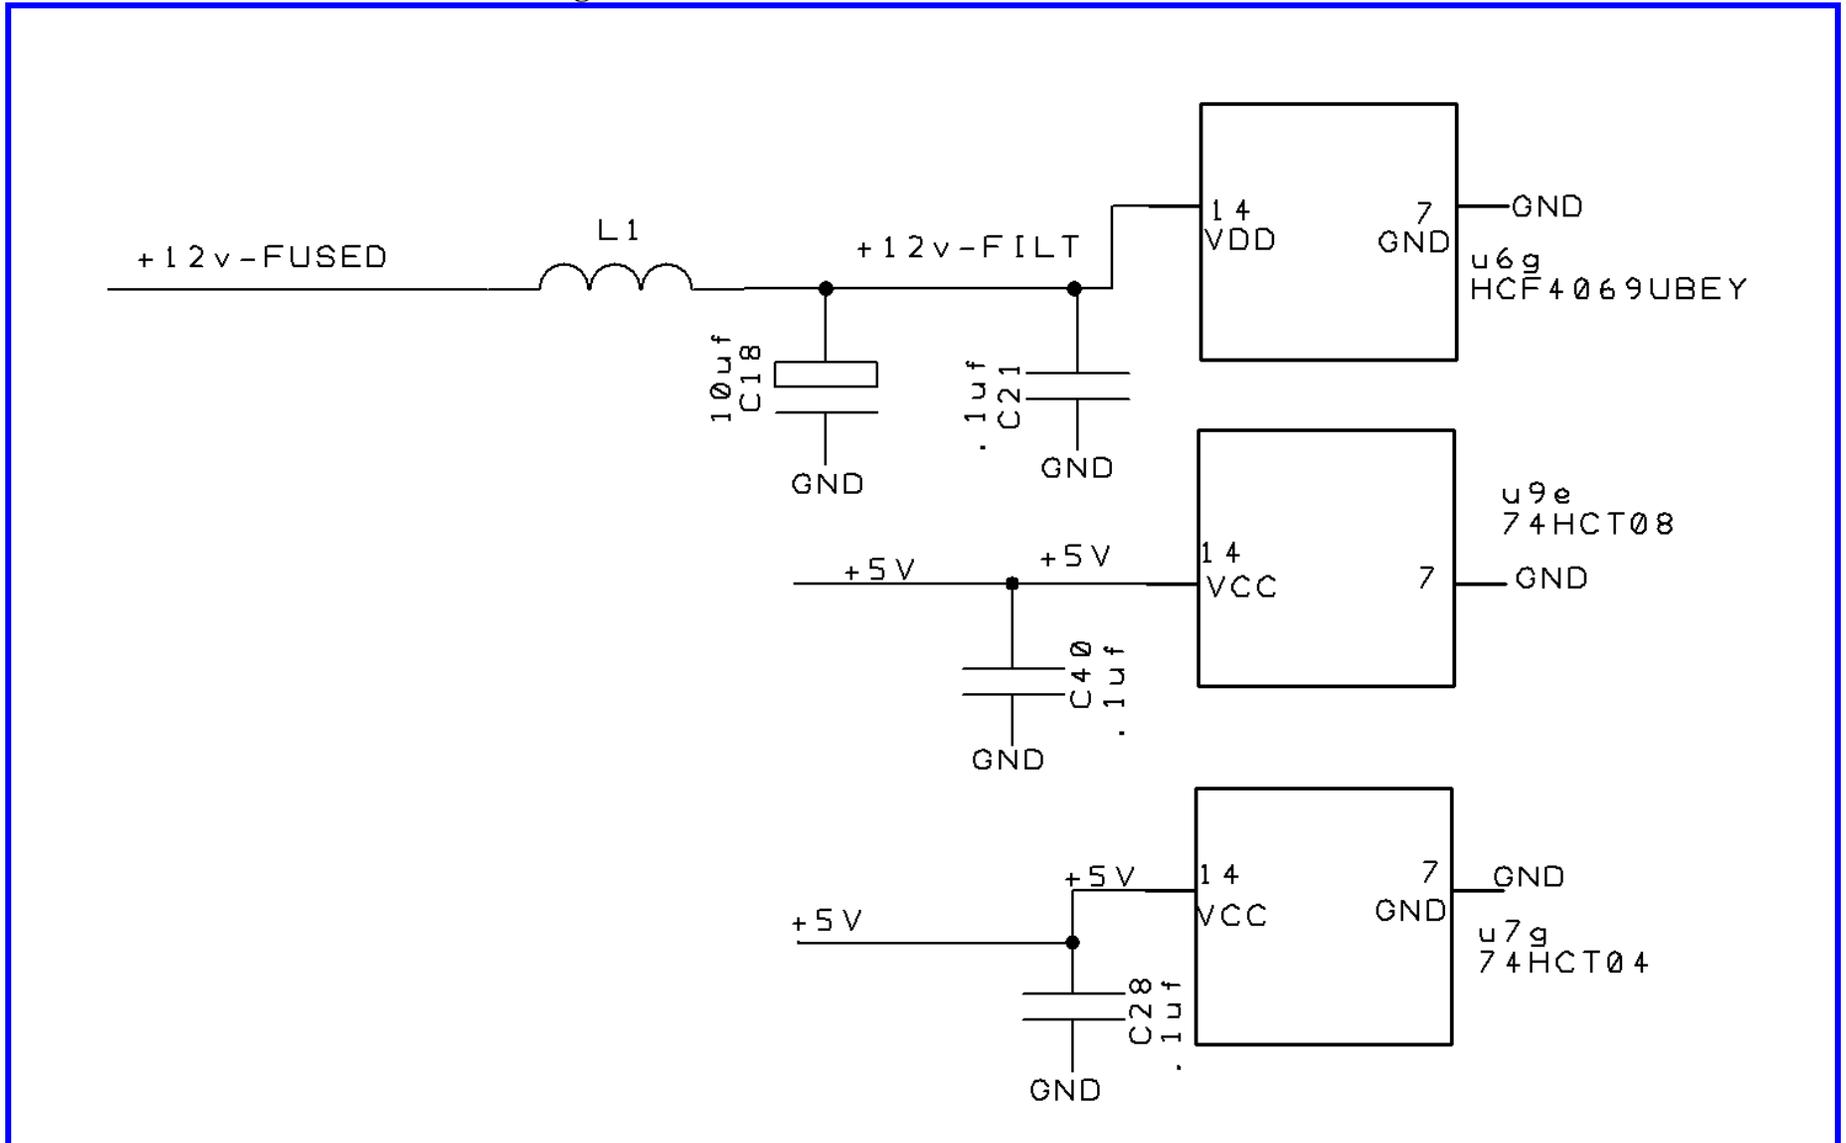


Figure 6 - Schematic - Controller Board – Coupler Processing Circuitry

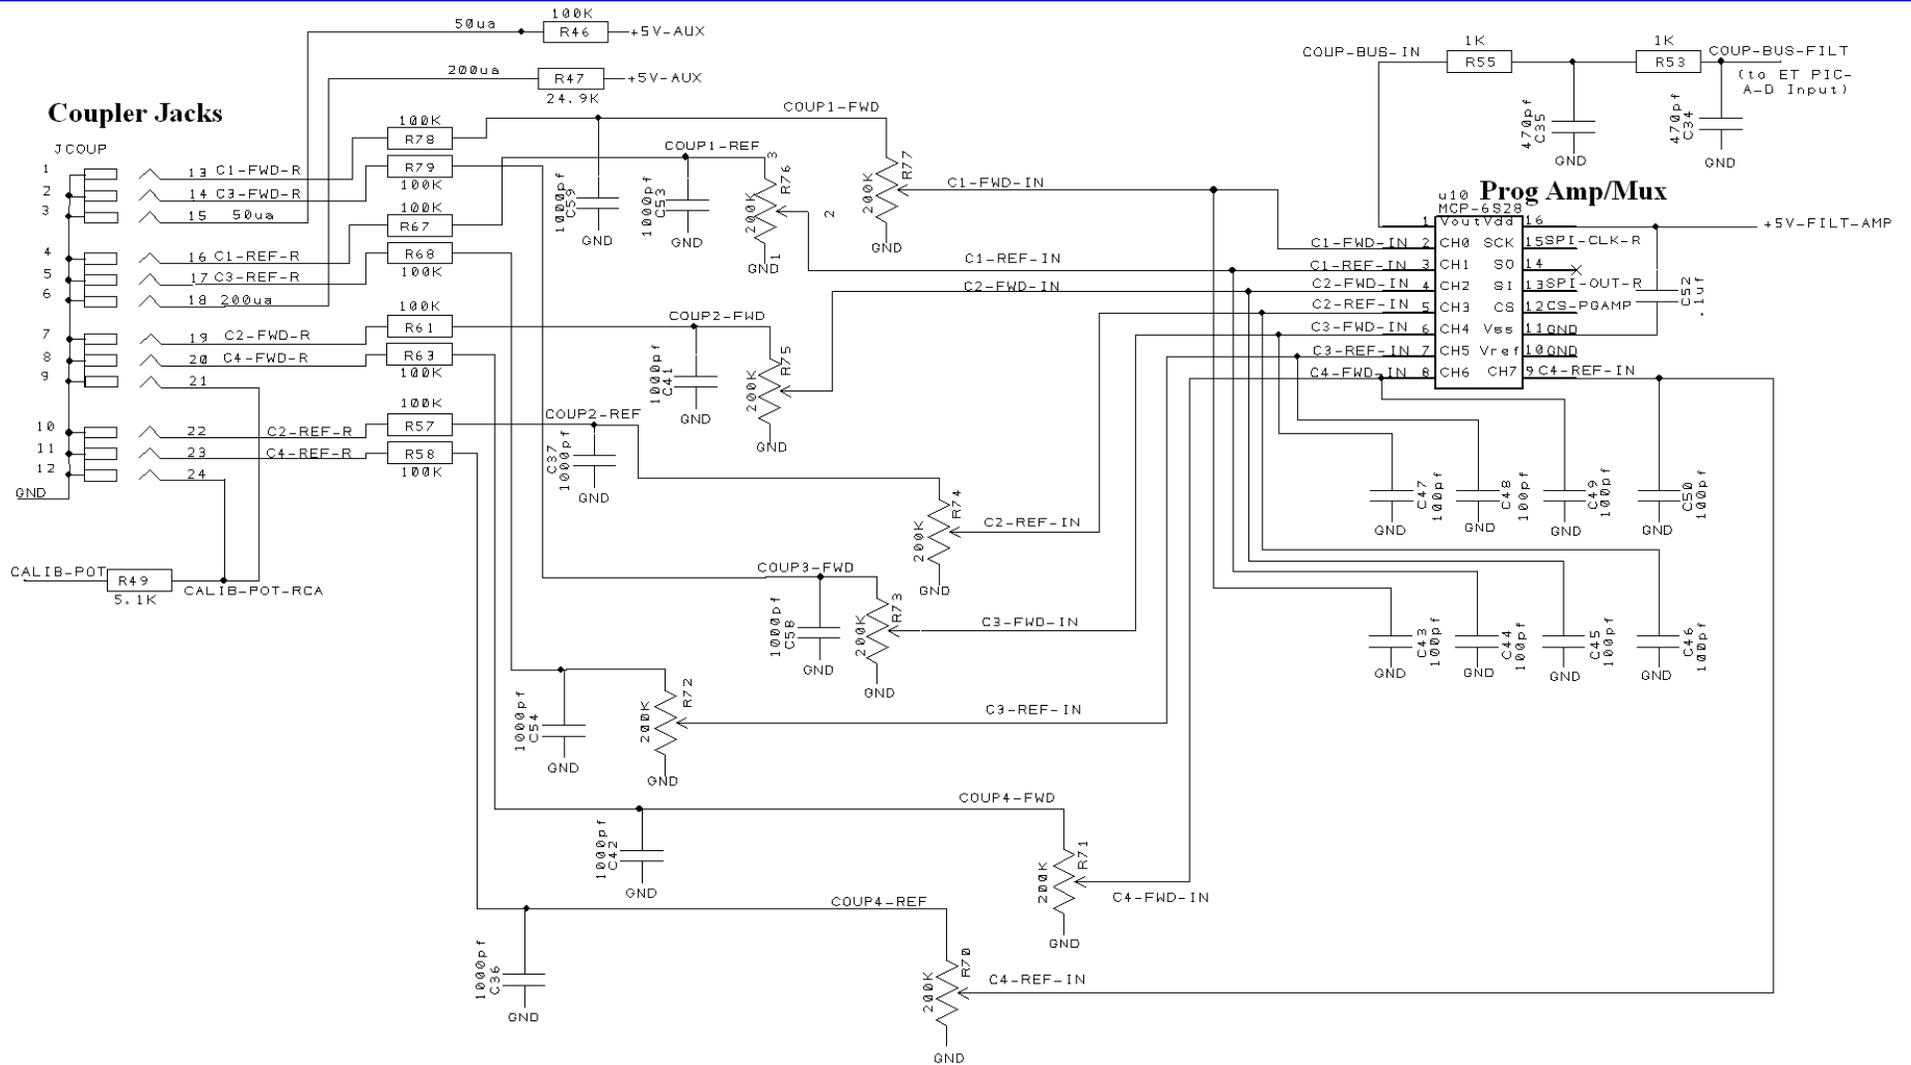


Figure 7 - Schematic - Controller Board – Panel Meter and Alarm Relay Circuitry

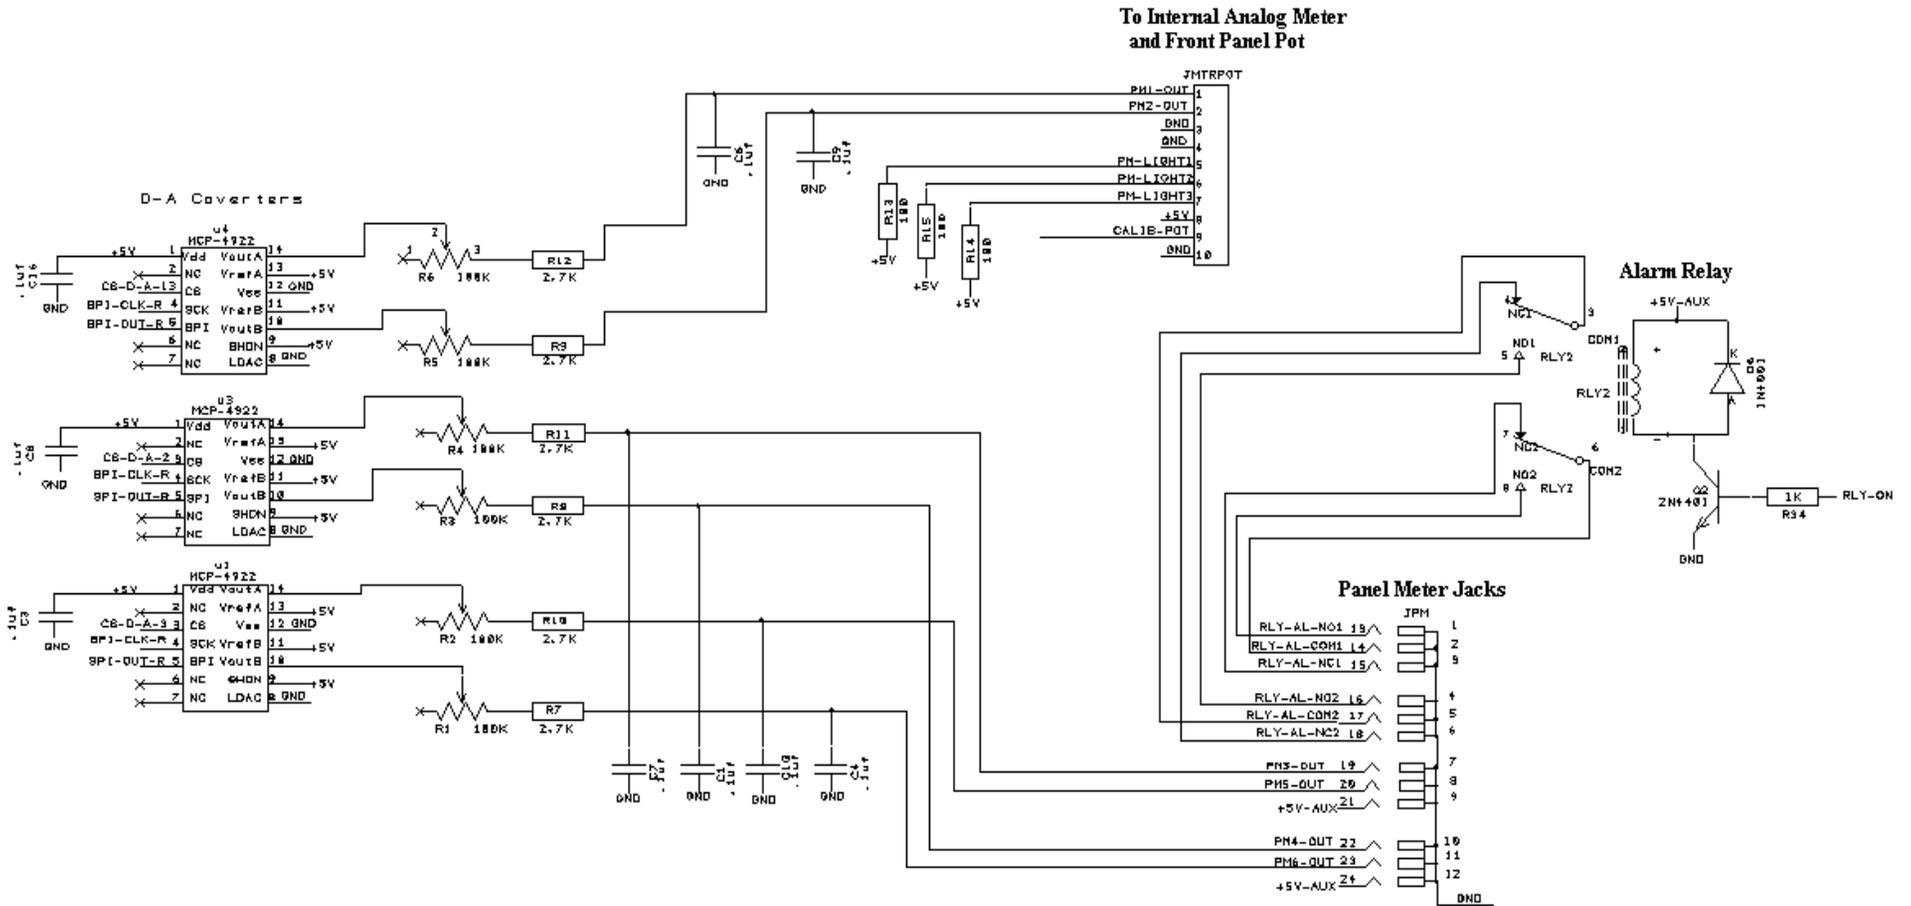


Figure 8 - Schematic - Controller Board – Processor Module

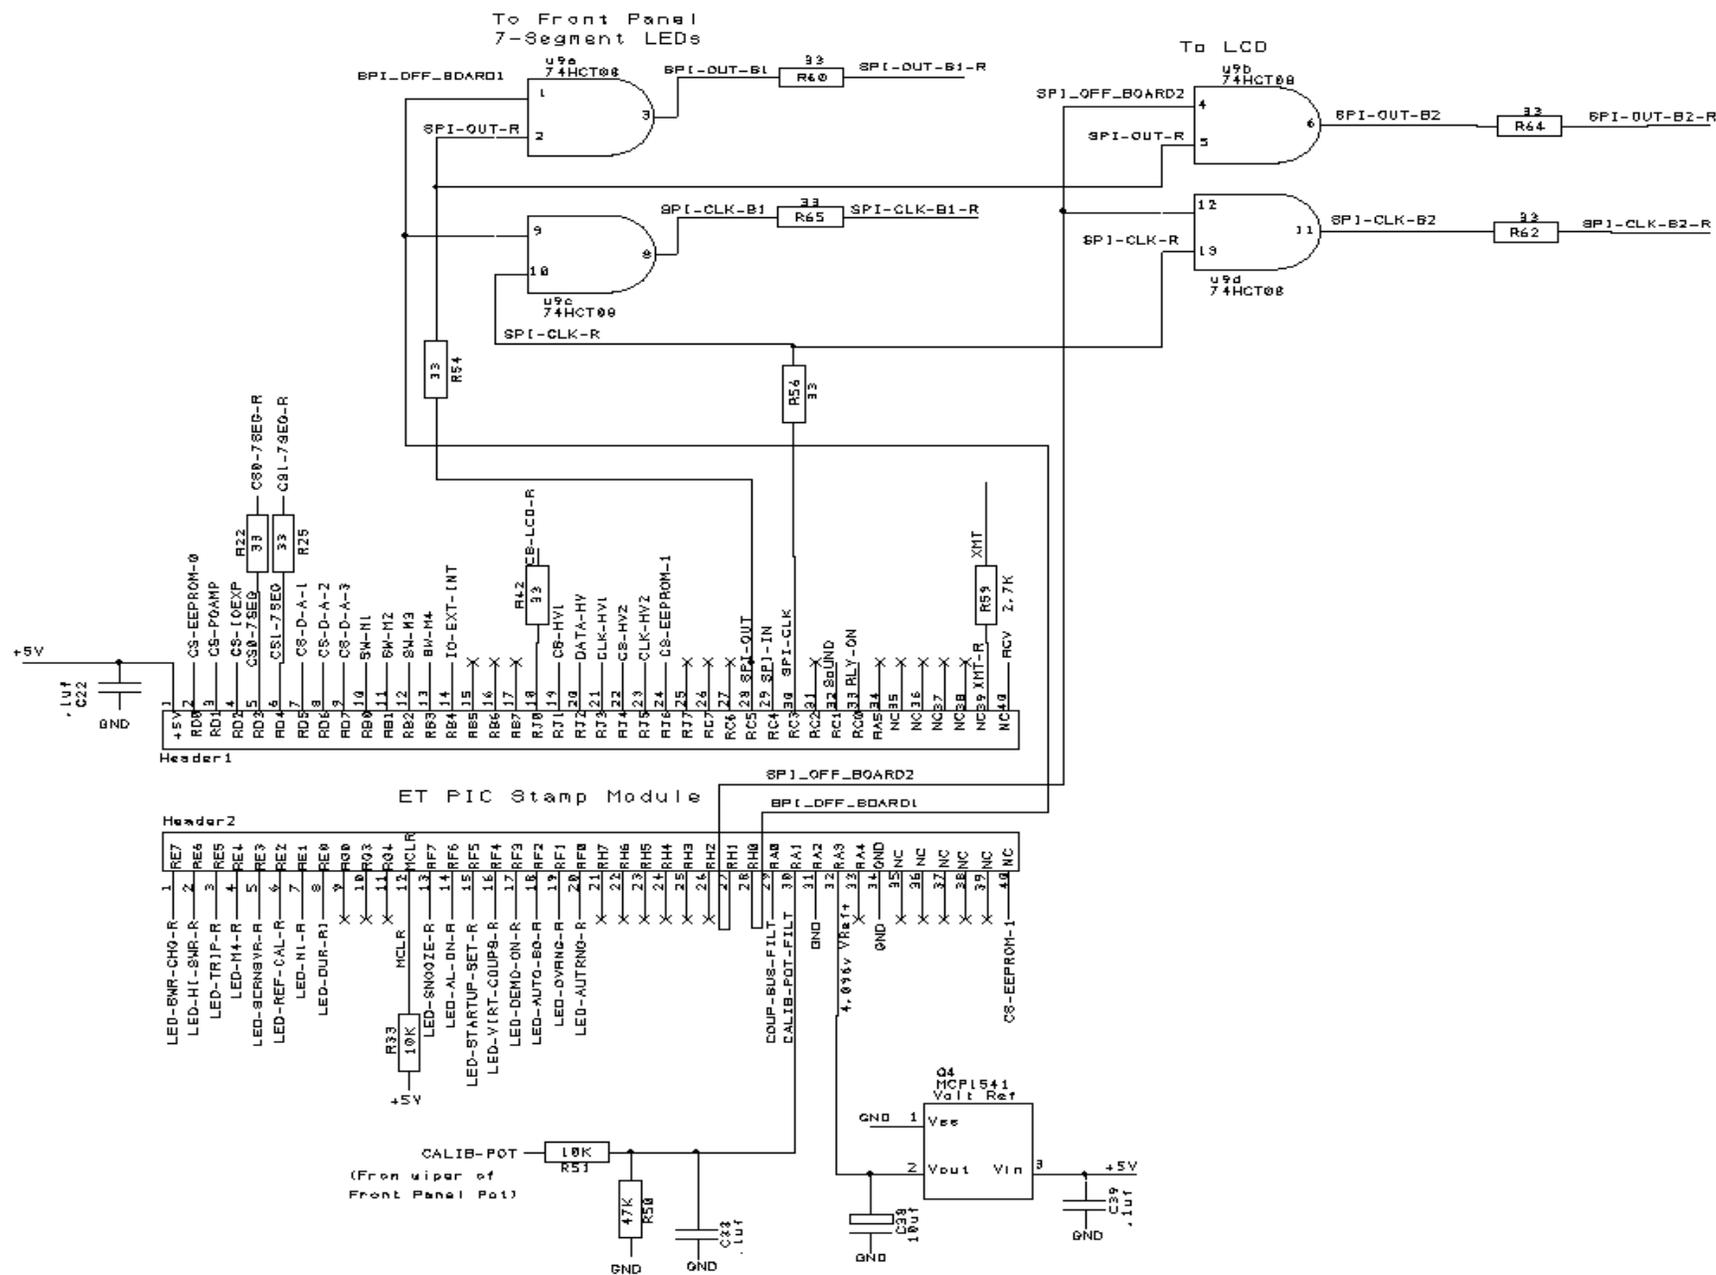


Figure 9 - Schematic - Controller Board – I/O


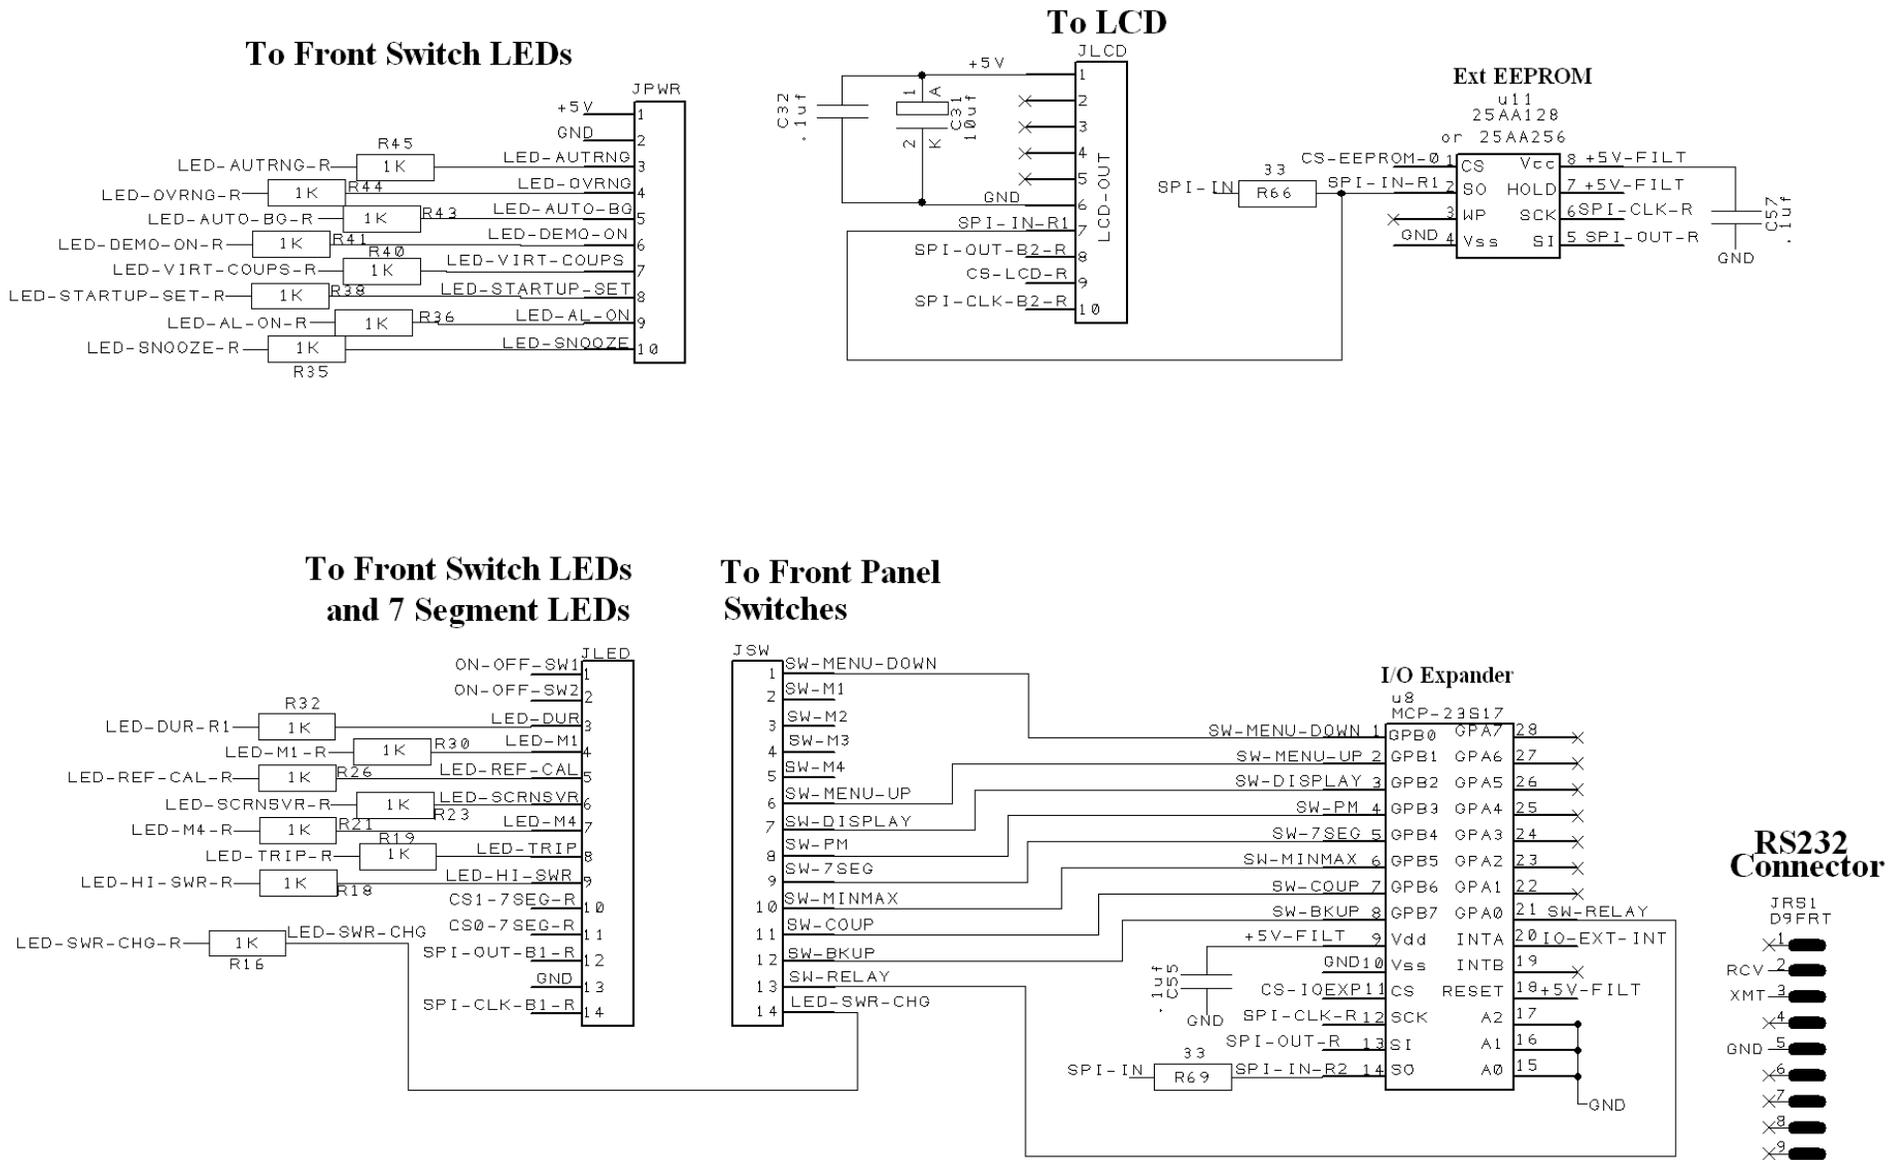


Figure 10 - Schematic - Controller Board – Miscellaneous


External Hi-Vis Displays

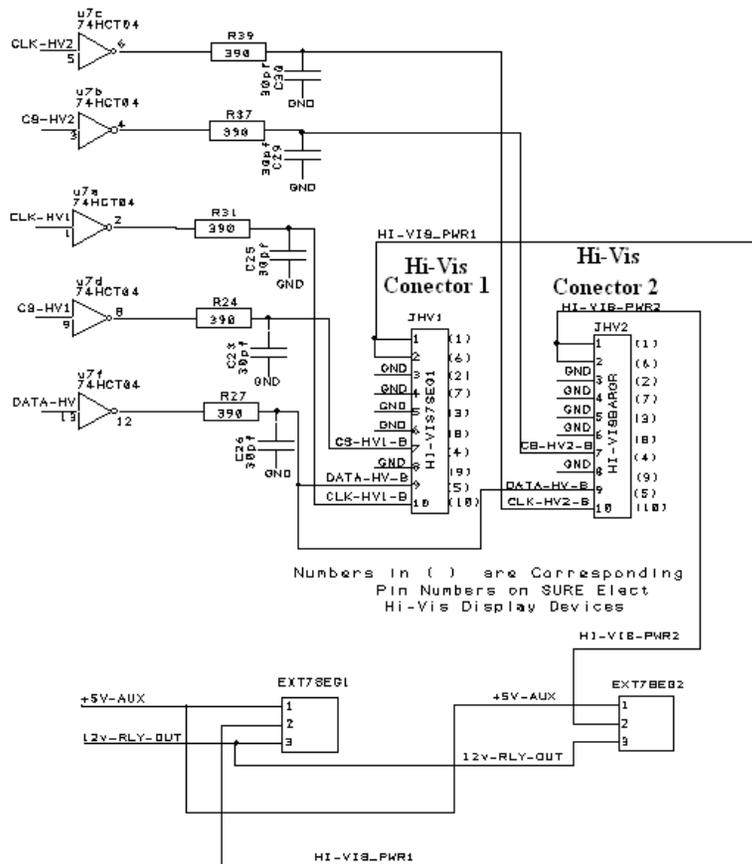


Numbers in () are Corresponding Pin Numbers on SURE Elect Hi-Vis Display Devices

Connect +5V or +12V to HI-Vis Display PWR leads based on Device Type (see User Manual)

Sounder

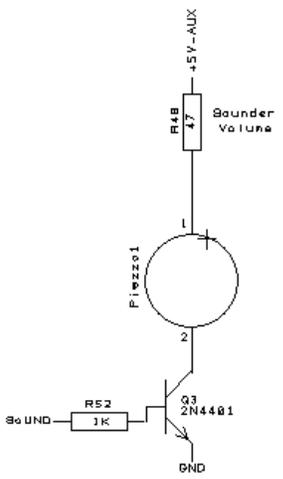

Unused

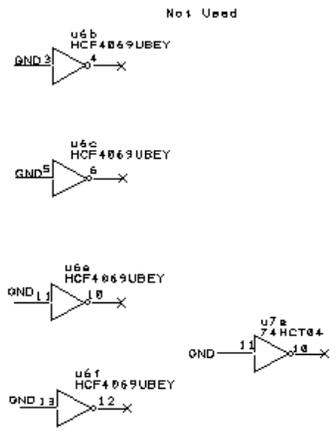

Not Used

Notes